


Vent Flange Installation



Vent pipe must extend 2" to 5" above base sleeve to allow for roof expansion and contraction. Cut off excess pipe above 5".




Place new vent pipe flange next to vent pipe and visually check pitch alignment.

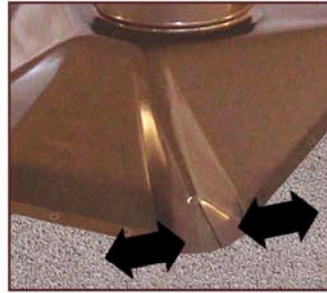

If pitch adjustment is needed, push the flange hips in to increase pitch, pull the flange hips out to decrease the pitch.



Place the vent flange over the vent pipe and rotate into position under one or more rows of shingles.

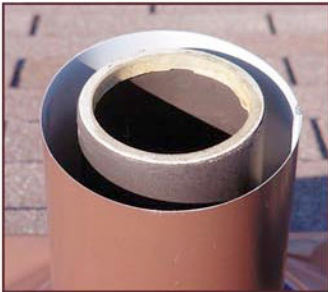

Visually check the base sleeve centered around the vent pipe for equal air circulation.



Upper flat section of flange must be completely covered. If necessary, rotate under two rows of shingles and trim to fit.



Install the top sleeve. Snap on standard cap or tighten the clamp on the frost inhibiting cap.



Use embossed guides around perimeter of the base flashing to securely nail the base to the roof.

F.J. MOORE

MANUFACTURING

www.fjmooremfg.com

500 Washington Street West • Cannon Falls, Minnesota 55009 • (800) 658-2331 • Fax (507) 263-4439